

RG-RSR10-01G-TD-LTE

+

6

© 锐捷网络

copyright © 2022



|

1 |

•

• ADSL2+

•

ǎ ŭ ǎ ĭ

•

<http://www.ruijie.com.cn>

•

<http://www.ruijie.com.cn/fw/>

•

7*24h

<http://ocs.ruijie.com.cn>

•

7*24h

4008-111-000

•

——

<http://www.ruijie.com.cn/special/fw/tool/xryf/>

•

 /

2. "Q

1 目录

RSR10-01G-TD-LTE V2.0

1.1 RSR10-01G-TD-LTE 简介

1.1.1 RSR10-01G-TD-LTE 简介

RSR10-01G-TD-LTE

32 RISC
RSR10-01G-TD-LTE

RSR10-01G-TD-LTE

TD-LTE 4G

RSR10-01G-TD-LTE




1.1.2 RSR10-01G-TD-LTE 接口


- | | | | | | | | | | |
|---|-----|---|-----|---|---------|------|---|-----|-----------|
| 1 | WAN | 4 | LAN | 1 | console | RJ45 | 1 | USB | 4G TD-LTE |
|---|-----|---|-----|---|---------|------|---|-----|-----------|
-
-
-

1.1.3 RSR10-01G-TD-LTE

 
RSR10-01G-TD-LTE

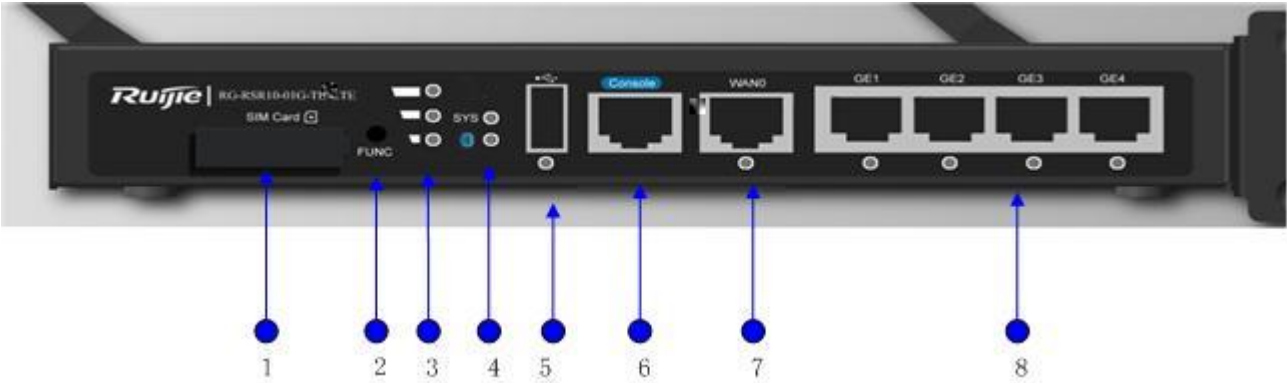

RSR10-01G-TD-LTE

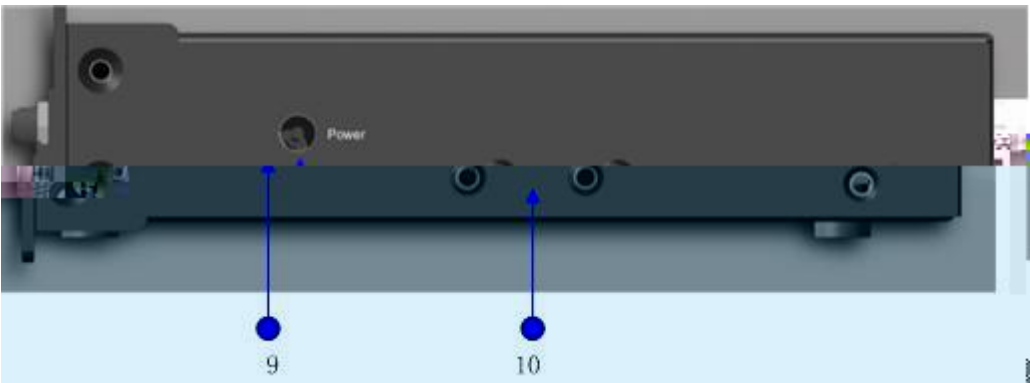 

RSR10-01G-TD-LTE

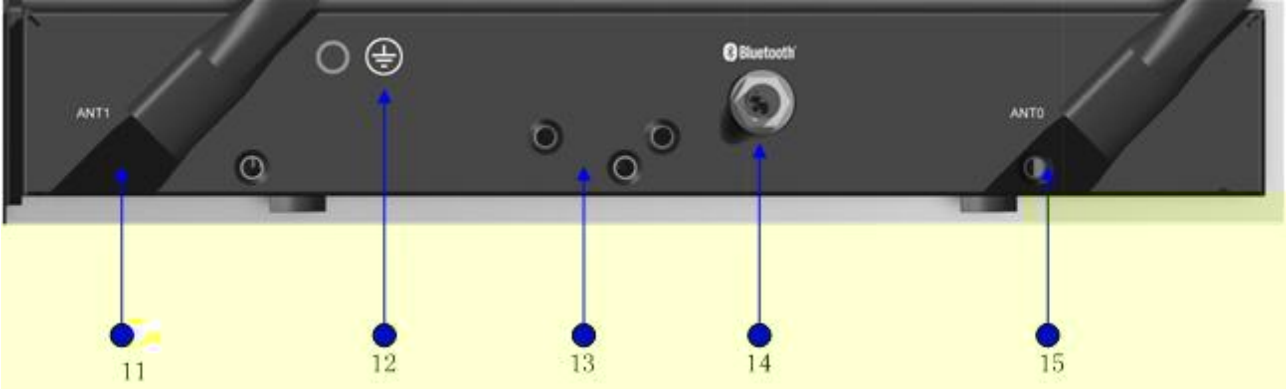 

1	SIM	2	FUNC
3	RSSI	4	SYS/
5	USB USB	6	Console
7	GE WAN	8	GE LAN 1 4
9		10	
11	4G ANT1	12	
13		14	
15	4G ANT0		

RSR820-T

SYS	
bluetooth	
USB USB	USB USB
RSSI 4G	4G 4G 1 2 3
GE	link link

1.1.4 RSR10-01G-TD-LTE 接口

RSR10-01G-TD-LTE

	RSR10-01G-TD-LTE
	1 WAN 4 LAN 1 console RJ45 1 USB 4G TD-LTE
	RISC
DDR3 RAM	512MB
Boot Rom	8MB

NAND FLASH	128MB
(W*H*D)	200mm*150mm*30mm
	100 240V 50~60Hz
	15W
	-10 60
	-40 85
	10 90%RH

RSR10-01G-TD-LTE GE RJ45 RJ-45 8 UTP

	A	B
1		
2		
3		
4	;	

1.2.1 支持的接口和协议

- RSR10-01G-TD-LTE
- RJ45 ARP 802.1Q
- X.25 HDLC PPP SLIP
- TCP/IP IP ICMP IGMP TCP UDP
- IP RIP V1/V2 OSPF V1/V2
- SNMP
- TELNET TELNET
- DHCP Server DHCP Client DHCP Relay TFTP
- VRRP
- PPPOE
- DNS DDNS
- X-MODEM
- NAT ACL AAA
- IPSEC L2TP PPTP

1.2.2 支持的认证和计费

1.2.3 支持的日志和告警

-
-

1.2.4 支持的网管功能

- DEBUG
-
- SNMP
-

- Console
- TELNET
-

1.2.5 配置接口

- IP
- AAA RADIUS
- PPP PAP CHAP callback
-
- OSPF RIP V2
- NAT
- IPSEC/IKE
- GRE
- VLAN

1.2.6 配置管理

- X-MODEM (Windows XP Windows NT UNIX DOS)
- Console
- TFTP
- BOOTROM
- U

2 16 f | u r j

2.1 f 3 u d o'

-
-
-
-
-
-
-
-
-
-
- UPS

2.2 f j l P

- /

RSR10-01G-TD-LTE

■ -10

-
-
-
-

2.2.4 "AW đ P

-
-
-
-

2.2.5 s P

-
-
-

2.2.6 È ý í 3

/

	
18	24

2.2.7 ĩ ĩ 1

- /
-
-

.....




RSR10-01G-TD-LTE

- HUB
- PC
-

3 安装

 3.1 安装步骤

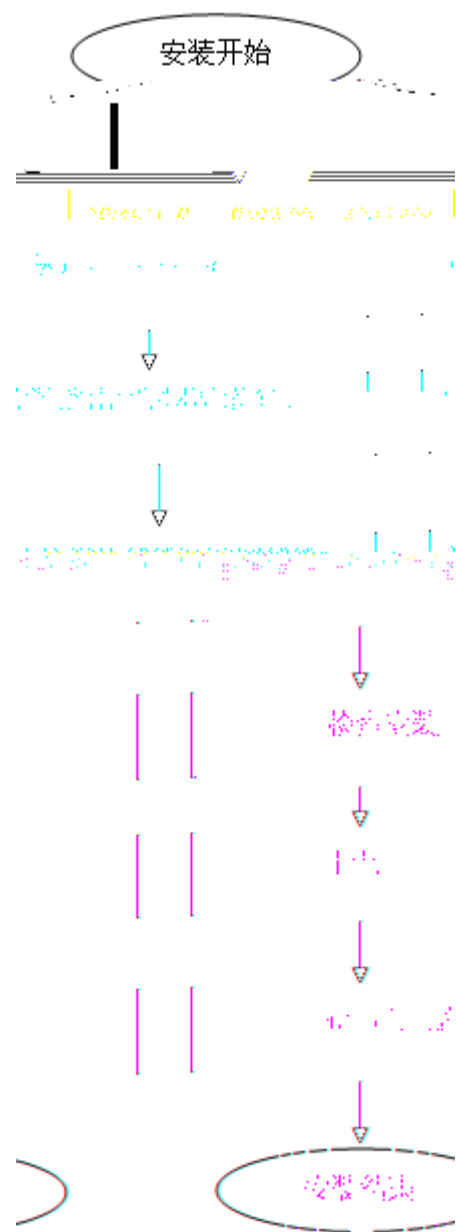

3.2 安装注意事项

■

-
-
-

3.2.1 测试环境

30mm

2




3.2.2 测试步骤

RSR10-01G-TD-LTE

30mm

 
2

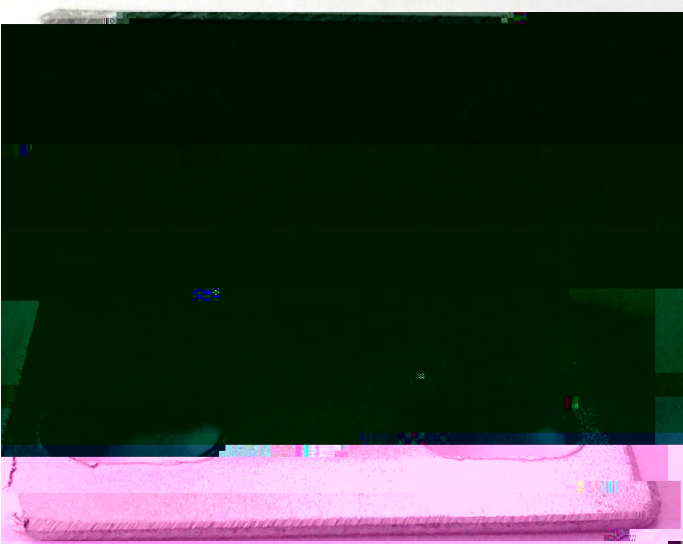

3.2.3 ħ ū s

19

 RSR10-01G-TD-LTE

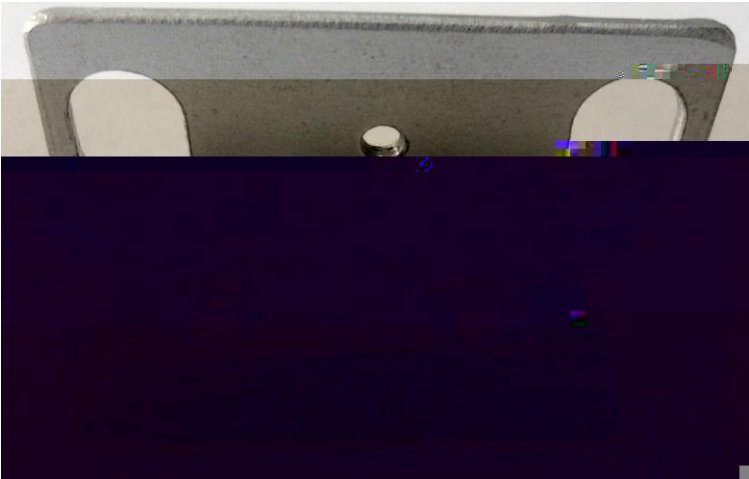


3.2.4 ħ η § | ' s

-
-
-

10cm

 3.3 4G





4.1.2 配置串口

4.1.2.1 配置串口

-
-
-

Copyright (c) 1998-2013s by Ruijie Networks.

All Rights Reserved.

Neither Decompiling Nor Reverse Engineering Shall Be Allowed.

*Jan 1 00:54:20: %MTD_DRIVER-5-MTD_NAND_FOUND: 1 NAND chips(chip size : 134217728) detected

*Jan 1 00:54:38: %DEVICE-5-CHANGED: Device RSR820-T (1) changed state to up.

*Jan 1 00:54:38: %USB-5-MODEM_FOUND: Modem <MC509> bind with tty 1.

*Jan 1 00:55:24: %SYS-5-WARMSTART: System coldstart.



4.2 1 6

5 f ã ¢ P

5.1 = || ã ù

RSR10-01G-TD-LTE SYS

-
-
-
-

6 连接配置

6.1 网络配置

6.1.1 控制台配置

CONSOLE RJ45 DB9F RJ45
RJ45-DB9 PC DB9M

6-1 CONSOLE

	1	2	
CONSOLE	DB9F RJ45	/	PC DB9M