

19

19

supervisor

1 19

console

telnet

2

,

telnet


9600

8

1

3

supervisor

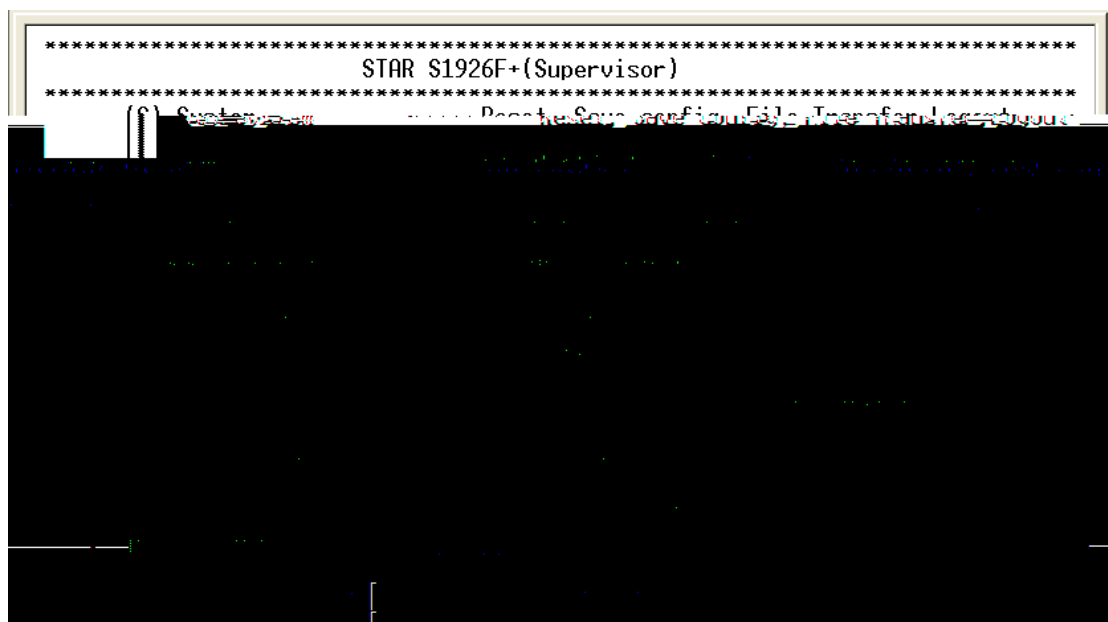

4

E

Security

```

*****
Security management
*****
(O)TOW security
(T)Enable/Disable SNMP agent
(S)SNMP security
(A)IP Access List
(L)Login Authentication Setting
*****
'Hot key' to enter submenu, 'Esc' to return.
*****
Input menu option:

```

5 0 Tow security

```

*****
Telnet/outband/Web Server security
*****
- Security item: 1
(U) Username(len: 8-32): supervisor
(P) Password(len: 8-32): *****
(A) Access : Supervisor
(S) Status : Valid
*****
'Hot key' to enter submenu, 'Esc' to return.
*****
Input menu option:_

```

6 U P 8-32


7 S System S,

console

1

4 ctrl



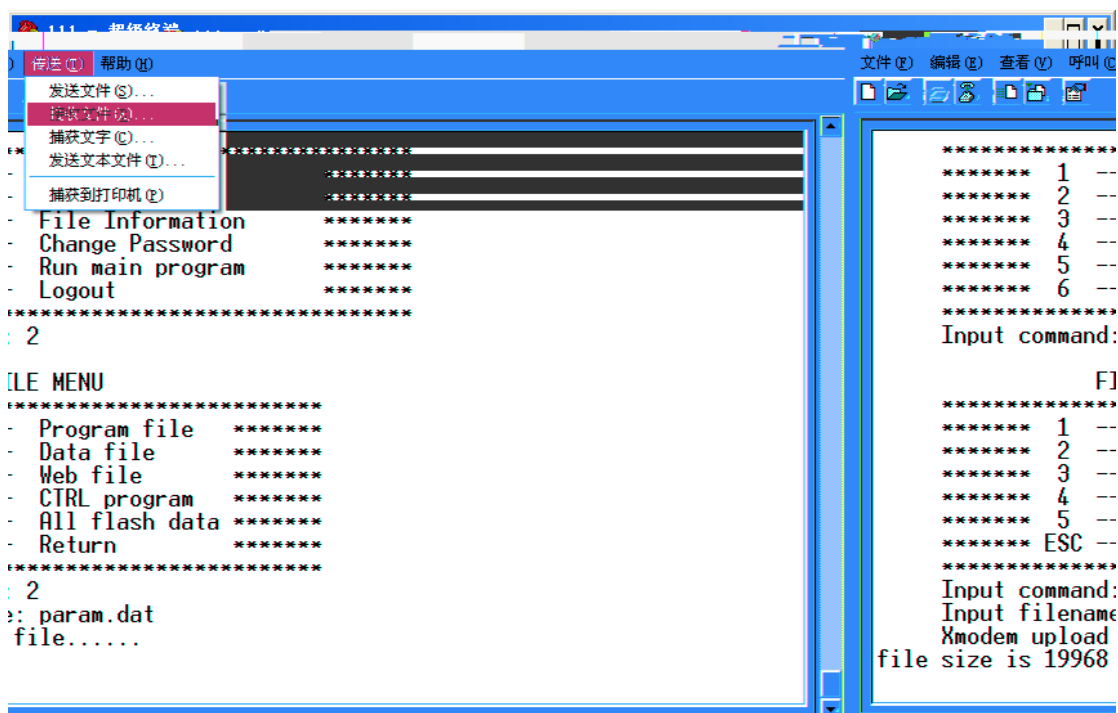



6

xmodem

“ ”

param.dat

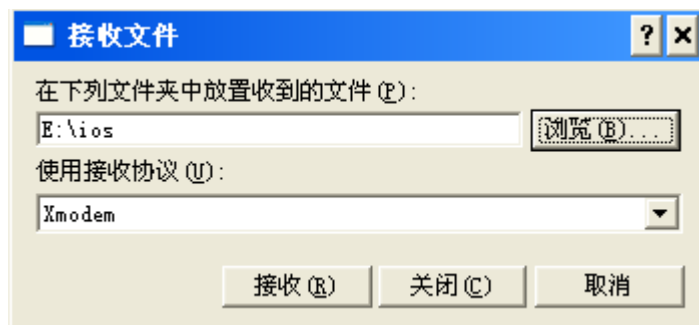

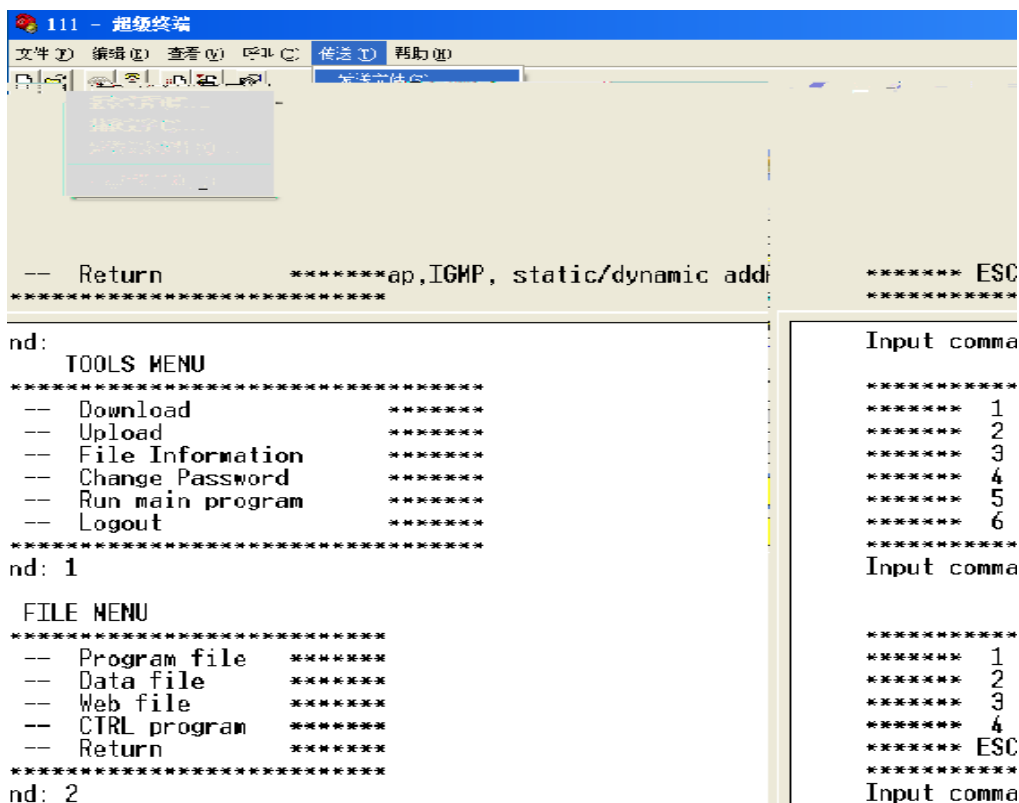

9

xmodem



10

