


" "

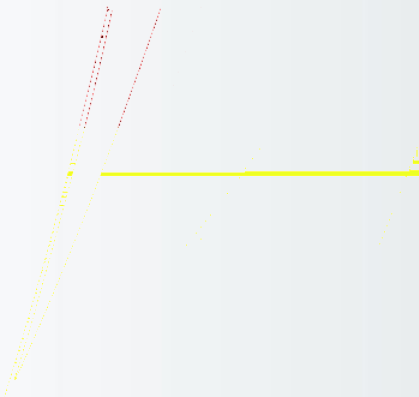



—



I



-10 ~60

-40~85

10%~90%RH

I



RSR820

30mm

2






19

RSR820

DIN

RSR820-T

DIN

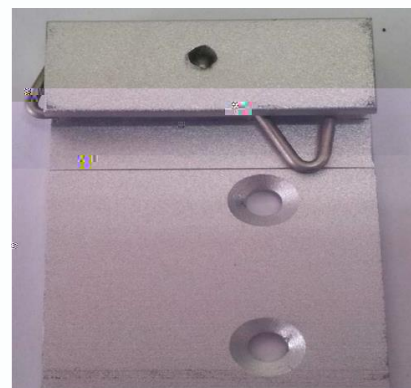

DIN

I




10cm





—

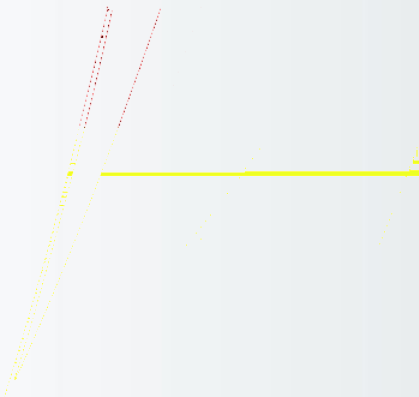



PWR

1

WEB

PC

PC

WAN0 GE1-GE4

PC IP

192.168.1.2~ 192.168.1.254

255.255.255.0

192.168.1.1

192.168.1.1

WEB

admin/admin

欢迎使用 **DSR** 路由器 WEB 管理系统

 **登录**
请输入您的用户名和密码！



用户名:

密码:

[忘记密码怎么办？](#)



www.ruijie.com.cn

2


CLI

PC

Windows

RS232

Console

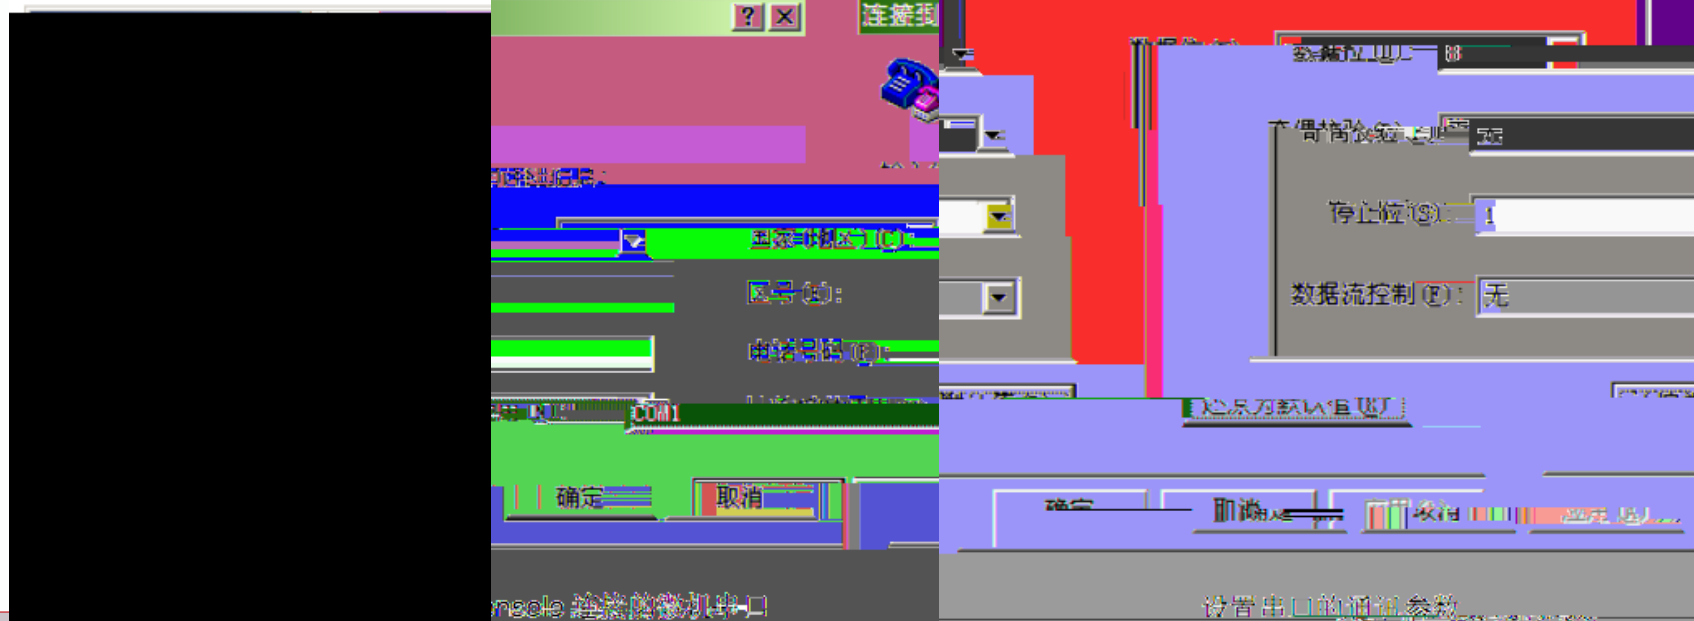



Ruijie>	User EXEC		
Ruijie#	Privileged EXEC	enable	
Ruijie(config)#	Global configuration	terminal configure	
Ruijie(config-if)#	Interface configuration	interface	
Ruijie(config-vlan)#	Config-vlan VLAN	vlan_id vlan	VLAN



Router(config)#ip route 0.0.0.0 0.0.0.0 cellular 0/0 // 4G

Ruijie(config)#exit //

Ruijie#write // write

Ruijie#show running-config // show running-config

www.ruijie.com.cn

www.ruijie.com.cn/service.aspx

support.ruijie.com.cn

webchat.ruijie.com.cn

4008-111-000