




WEB

APP

CLI

WEB

WEB

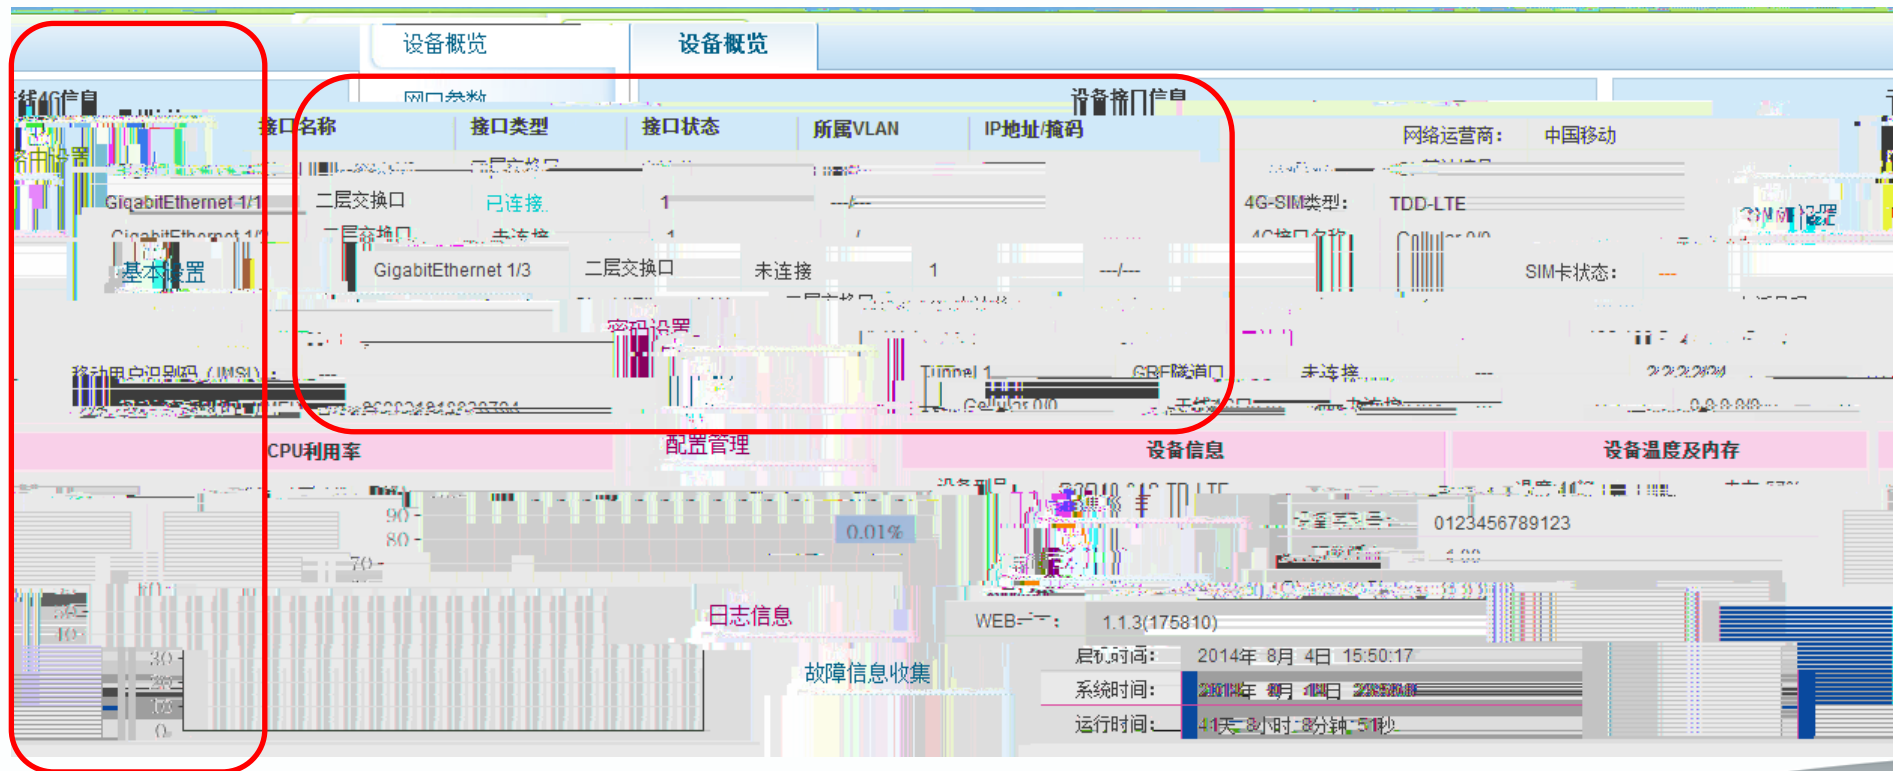



Riite

WWW.RIITE-RES.COM

WEB



WEB

Ping


icmp

Traceroute

4G

WEB

WEB

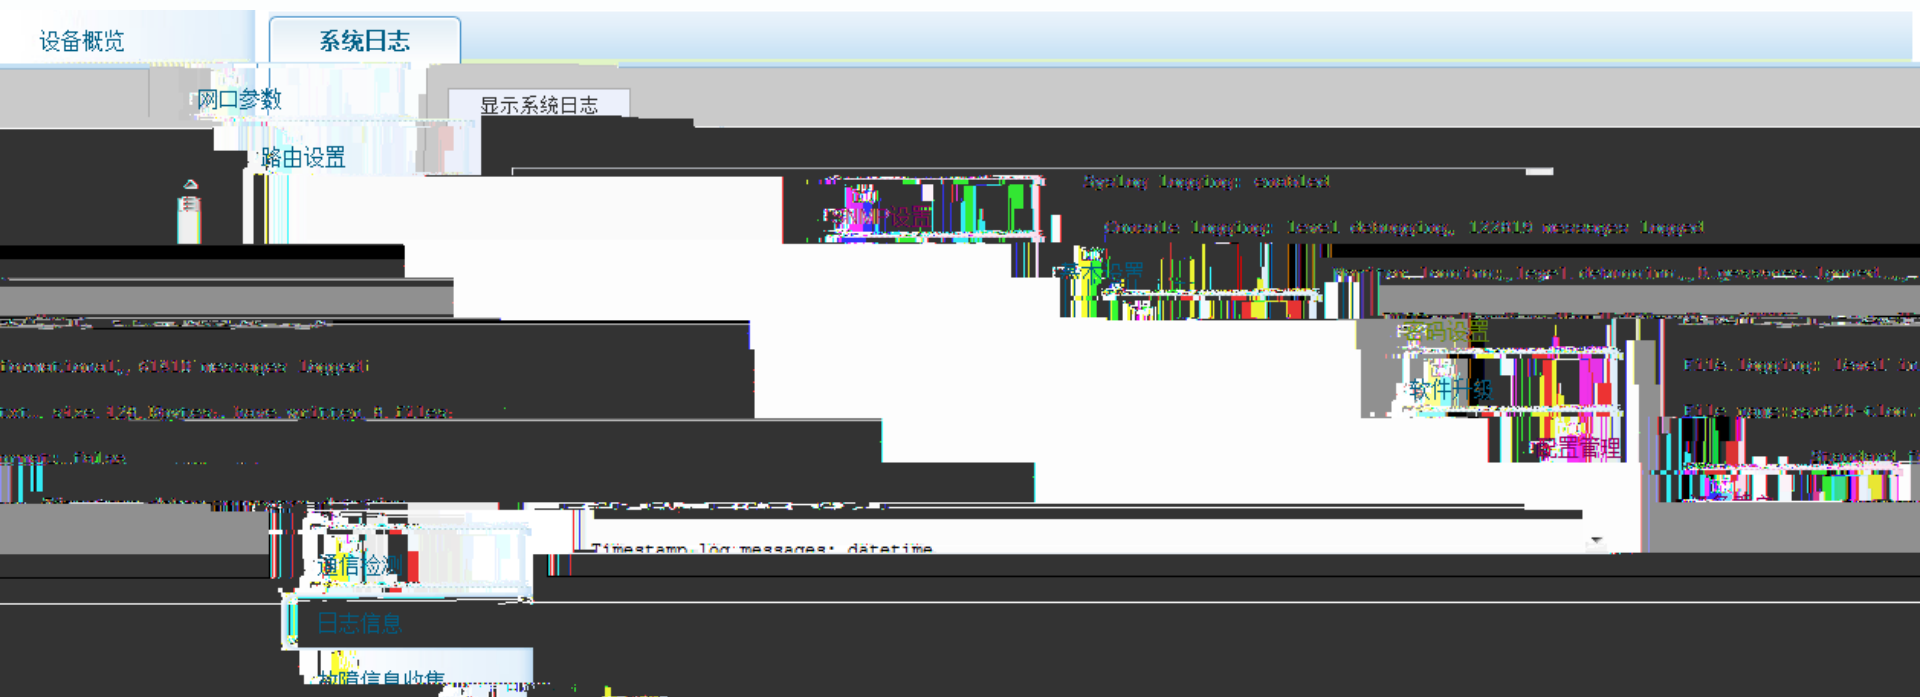

WEB

“ ”

CPU

设备概览

故障信息收集

网口参数

非业务故障信息

路由设置

SNMP设置

基本设置

System start time : 2014-08-04 15:50:17

密码设置

软件升级

System BOOT version : 10.4(3b13)T19 Release(175810)

日志信息

故障信息收集




Ruijie

WEB

APP

CLI


APP

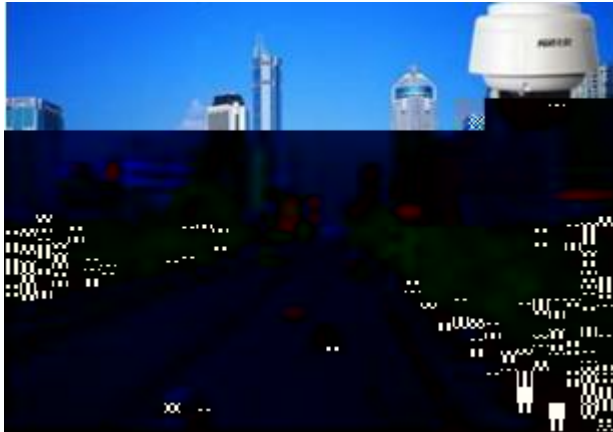

1

2

**RSR10-01G-TD-
LTE RSR820-T/820-T(A)**

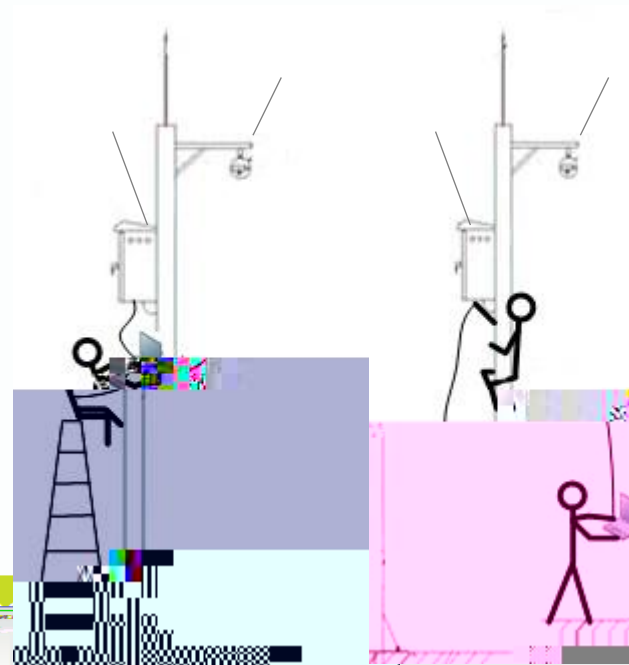

Ruio

APP

Android “ ” APP

<http://bnm.ruijie.com.cn>

“ ”



APP

10



“ 1234 ”



APP

I

APP

4G
4G
SIM
CPU

4G


APP

.text

SD


“

”

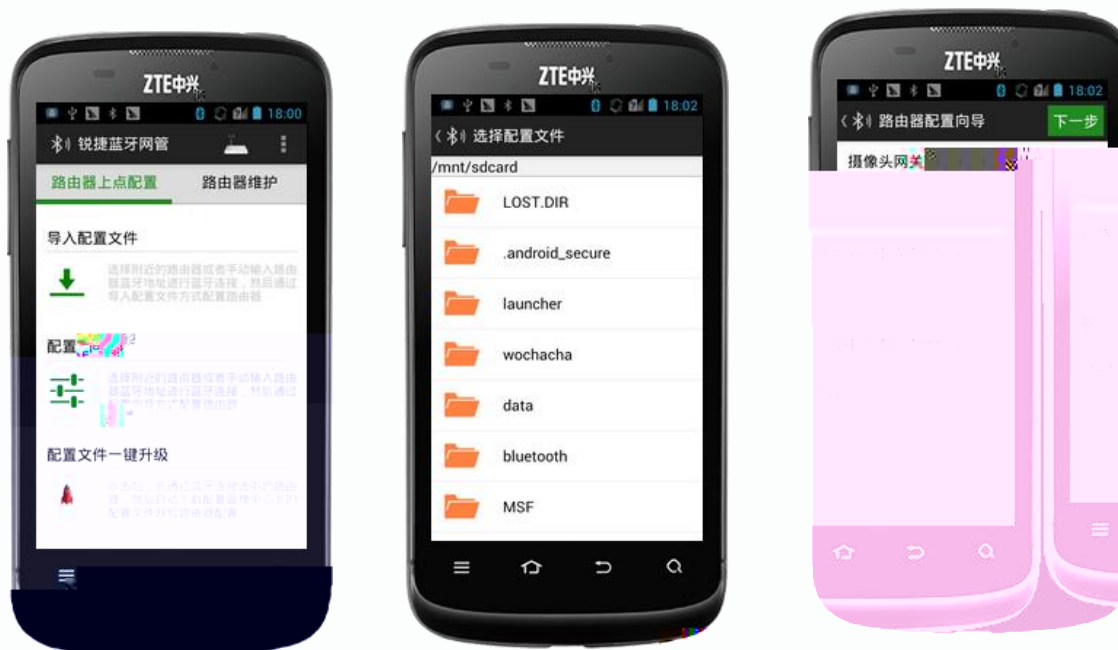



APP

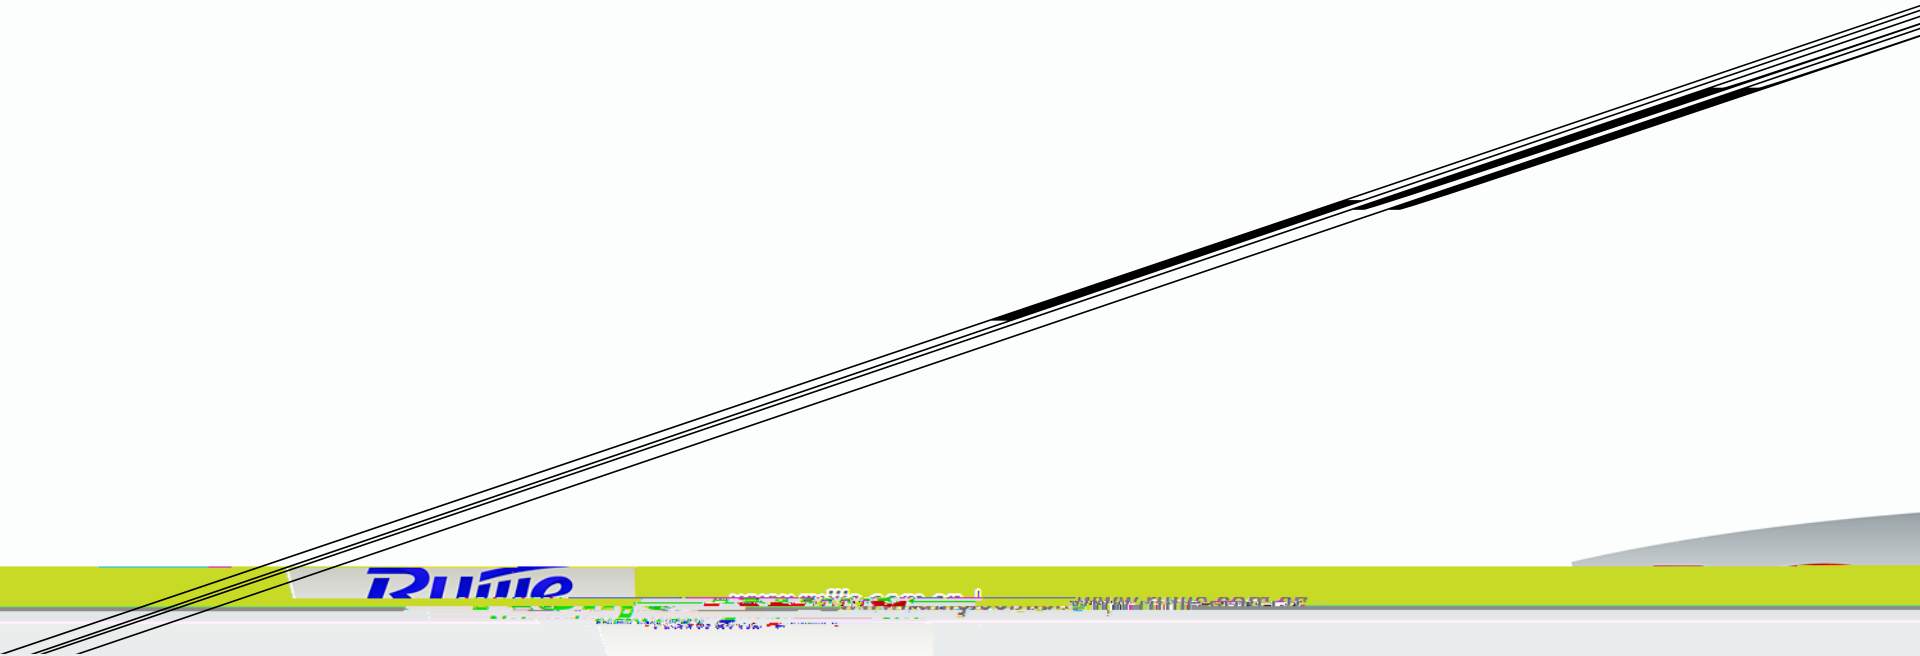

APP

ICMP

4G

XX

4G

APP





APP

CLI

CLI

- 1
- 2
- 3
- 4
- 5

APP

APP

IP

I

APP

APP
txt

2G/3G/4G



APP

wifi

10

10

ruijie

ruijie

1234


0000



APP



APP

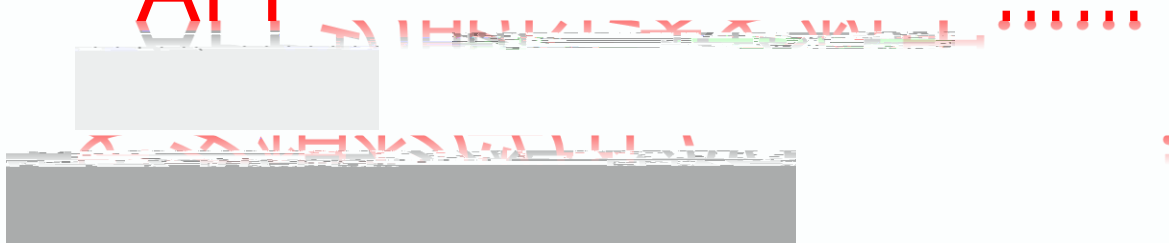

WEB

APP

CLI

CLI

CLI

RSR820

RGOS

CLI

RGOS

CPU

show cpu cpu

Ruijie#show cpu

=====

CPU Using Rate Information

CPU utilization in five seconds: 12.12%

CPU utilization in one minute : 12.07%

CPU utilization in five minutes: 12.07%

show memory

Ruijie#show memory

System Memory Statistic:

Free pages: 54998

watermarks : min 2140, lower 4025, low 5910, high 7795

System Total Memory : 512MB, Current Free Memory : 225428KB

Used Rate : 57%

CLI

show interface

CLI

```
show log  
UP/DOWN DOWN -
```


```
flash
```

```
flash
```

```
Ruijie(config)#logging file flash:log 2000000 7 //
```

记录到flash



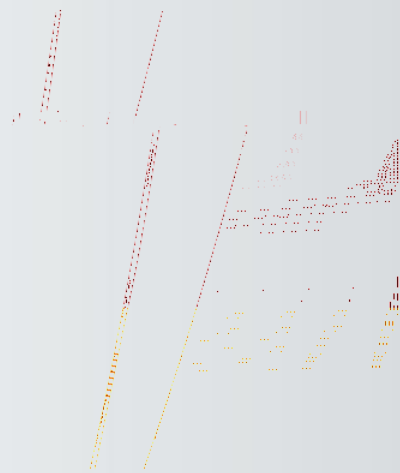



WEB

WEB IP

WEB

WEB

console

WEB

IP

IP

<http://192.168.1.1>

Ruijie#show ip interface brief

Interface	IP-Address(Pri)	IP-Address(Sec)	Status	Protocol
VLAN 1	192.168.57.92/24	no address	up	up
Tunnel 1	2.2.2.2/24	no address	up	down
Cellular 0/0	no address	no address	down	down

console

Ruijie#show service

.....

web-server : enabled

web-server(https): enabled



console

Ä console PC
COM
Console console



WEB

console

%Now Begin Download File FileList.txt From 192.168.64.1 to 192.168.64.78
send download request.
send download request.

.....

RGOS

TFTP

“



BOOT

”



show slot



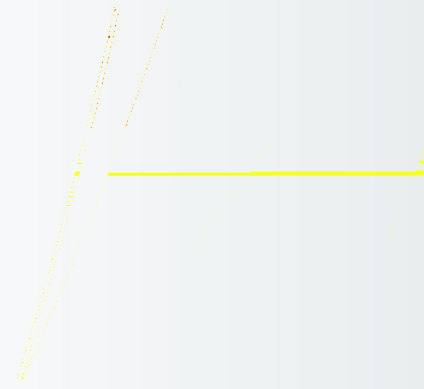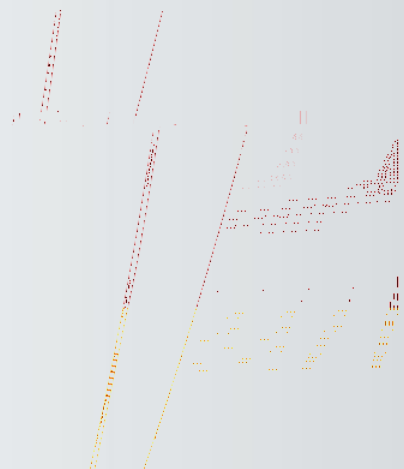

WEB

WEB

路由设置

静态出口设置

SNMP设置

基本设置

密码设置

软件升级

配置管理

设备重启

通信检测

日志信息

故障信息收集

Ruijie

2019/06/25 11:52:03 302

MAIN

Ruijie#dir

Directory of flash:/

Mode	Link	Size	MTime	Name
1		2363	2013-01-15 10:07:19	config.text
1		15107168	2013-01-15 09:47:59	rgos.bin

.....

Ruijie#copy flash:config.text flash:config.bak// config.bak

Ruijie#delete config.text //

Are you sure you want to delete " config.text " ?[No/yes]yes //

Ruijie#reload //

Proceed with reload? [no]y //

BOOT

console

“ Press Ctrl+C to enter Boot ”

ctrl+c

boot

BootLoader>dir

Directory of flash:/

Mode	Link	Size	MTime	Name
1		512	2013-01-09 23:07:03	Boot_hotcmd.cfg
1		2363	2013-01-15 10:07:19	config.text
.....				
1		15107168	2013-01-15 09:47:59	rgos.bin



BOOT

BootLoader>rename config.text config.bak // config.bak

BootLoader>delete config.text //

BootLoader>load //

.....

WEB

WEB

“ ”

“ ”

“ ”

注意事项:

件升级可以系统固件(*.bin)，升级完成后必须重启设备才能生效。

件升级可以升级MIB(*.mib)，升级完成后无需重启设备即可生效。

版本信息

硬件版本:	1.00
软件版本:	RGOS 10.4(3b13)T19 Release(176433)
WEB版本:	1.1.3(176433)

文件路径:

浏览...

升级进度:

0%

状态信息:

未指定升级文件。

日志信息

故障信息收集

网门参数

路由设置

SNMP设置

基本设置


密码设置

软件升级

配置管理

设备重启

MAIN

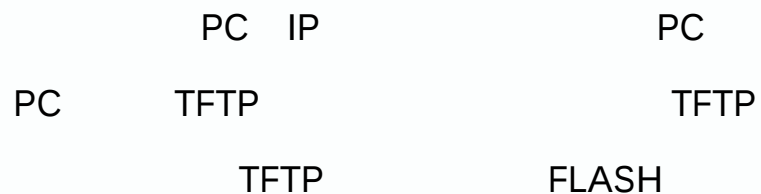

copy tftp://[pc_ip]/[file_name] flash:rgos.bin

Ruijie#copy tftp://1.1.1.1/rgos.bin flash:rgos.bin

1.1.1.1 PC

BOOT

PC

TFTP

TFTP

ctrl+C

ROM

TFTP



www.ruijie.com.cn

www.ruijie.com.cn/service.aspx

support.ruijie.com.cn

webchat.ruijie.com.cn

4008-111-000