

%• V . Ë @ & ² C |

G

ù ¢ Contents





I



安装设备到指
定位置



I

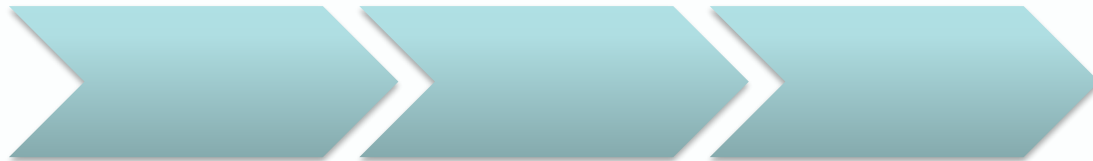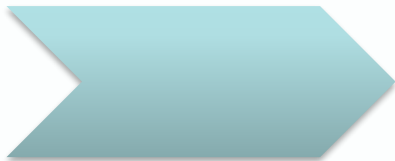

ù Ú ì G ð × Ô19)² Ò c 1 d u

1

I

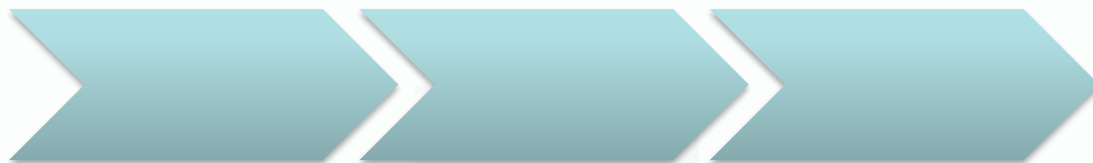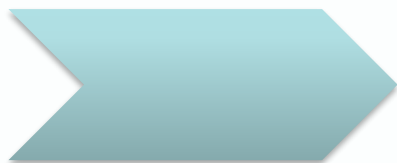

GfÔǎV€U (ı Ô² Ò»]éª‘ïÐd



4 ï

ï ~

J

S57H

ï

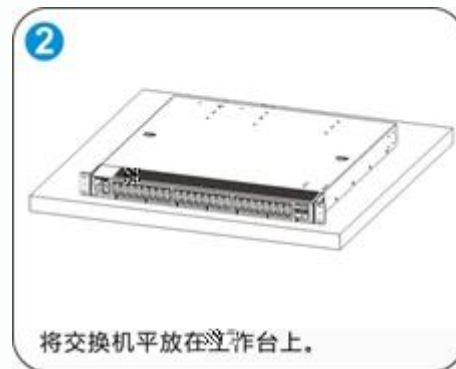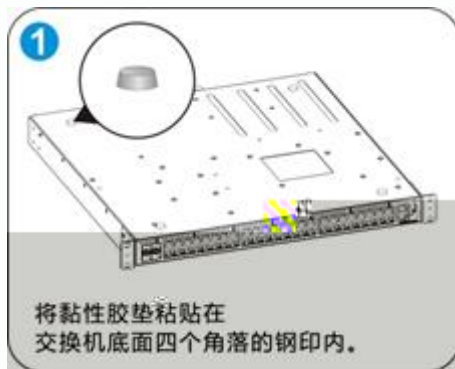

Runto

WWW.HIHIS-300.COM

I



G ° Ê 6 ‡ / © - c 1 d u

h OT

OT

5


h

G ° Ê x / © - u

h

PE

PE

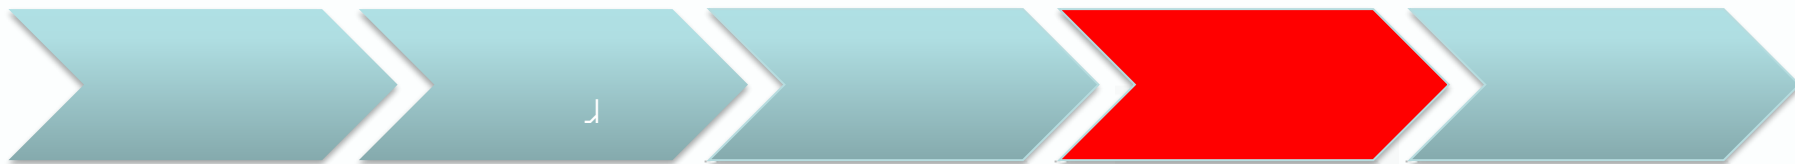

G Ô | ± u
ã

η

η

≈

η

≈

7

ã

J

í

≈


Ů

≈

≈

Λ[≈]

6 u Ô | ± TCã 7 g \$ Ô | T • if Ô n V € ož

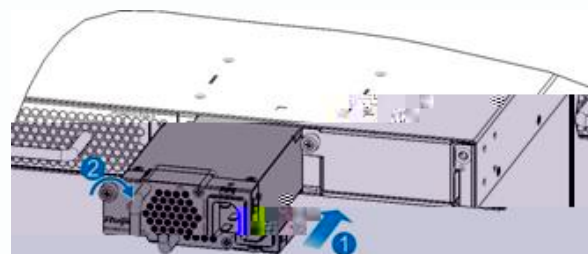



ž š ä / ó Ó

ı

ı

20

ž š ä / ó Ó

ı

ı

ı

ı

ô | ó Ó

ı

ù ¢ Contents



1 Console

2 Telnet/SSH




Coloss

| Console


」

设备管理

| Console

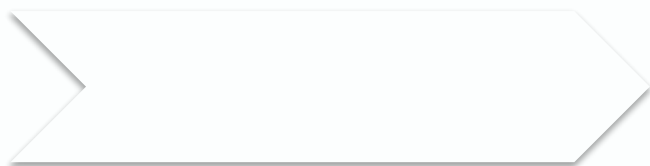

| Console

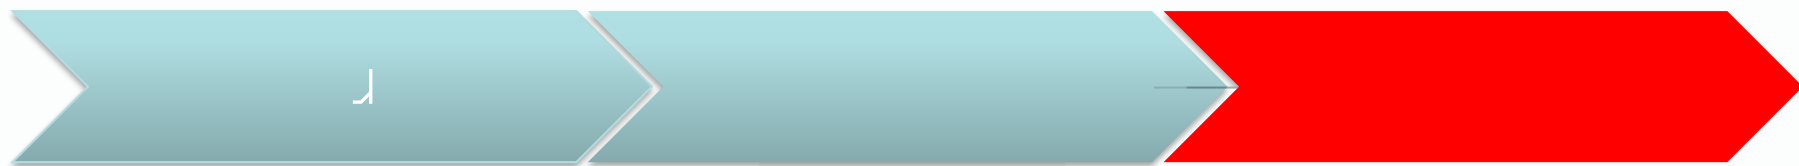

Console

CLI

|

Telnet/SSH

CLI

ǎ

|

|

a Â Ù „


O ” u

Đ Đ “ ¥ a Ó w W

α ´ “ u x ž Ó g g] a Â g f Ô n g • p W

´ “ u ^ . ? d ´

| Console

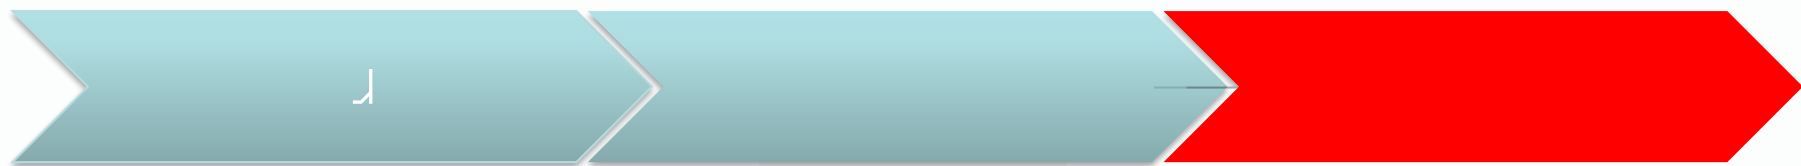


b CLI “ é ã &



Ruijie>enable

| Console

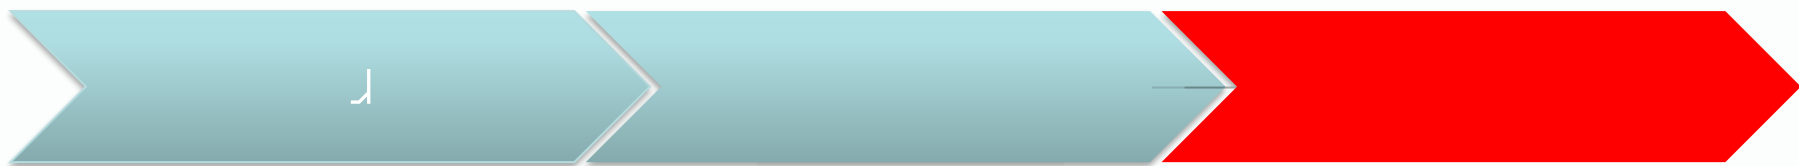

?

11.X CLI

↓

10.X

7


CLI

Ruijie#show version /show version slots / show cpu /show memory /show interface status /show ip route /show arp /show fan / show power /show temperature....

Ruijie#show run // ↓

Ruijie(config-if-GigabitEthernet 1/1)#show this // й

Telnet

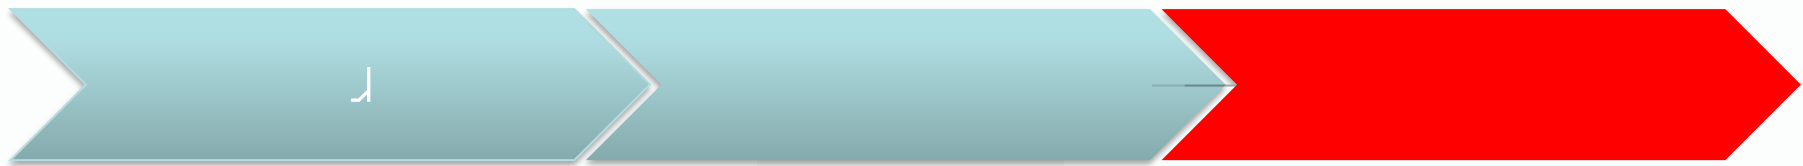

Telnet





5

RG-S5700H
RG-S5700H

RGOS11.4(1)B42
RGOS11.4(1)B42

S12000

S8600

S5750

S6220

10.X

S57H

11.X

1

ù ¢

10/10/2010

10/10/2010

10/10/2010

10/10/2010


10/10/2010

10/10/2010

10/10/2010

10/10/2010

10/10/2010

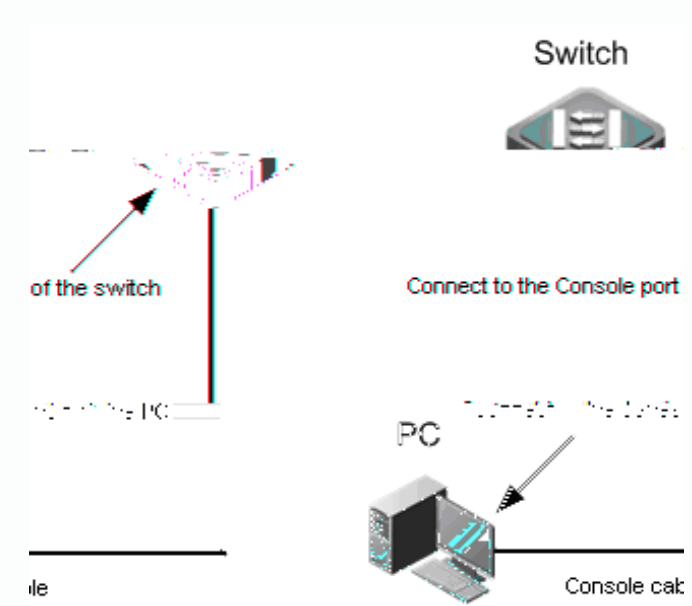

- 1 U
 - 2 FTP
 - 3 TFTP
 - 4 UBOOT
- FTP
- PPT
- α

1 2 3

bug

u

I U



Ô Ô 6 • u

show version detail

system software number

i 4008)

ò U

U USB U 5

U show usb usb id, usb remove xx

U



U盘插入 必须为FAT系统，NTP无法识别

I U



1o• § f Ô a Â Ù „ Ý 6 upgrade f W

Ruijie#dir usb0: USB


Ruijie#upgrade usb0:/xxxxx_install.bin xxxx_install.bin

U

2o• W ⇐ f á ... É 100% g Ë „Đ show upgrade status Ó f á ...

```
*Nov 27 19:29:03: %7: [slot 0]:Reload system to take effect!
*Nov 27 19:29:04: %7:
*Nov 27 19:29:04: %7: [slot 0]:Upgrade processing is 100%
*Nov 27 19:29:05: %7: [slot 0]:Upgrade processing is 100%
*Nov 27 19:29:05: %7: [slot 0]:Upgrade processing is 100%
Ruijie#
Ruijie#
Ruijie#show upgrade status
[slot 0]
dev_type: s6k
status : success
Ruijie#
```

3o• W ⇐ f Ù , é log á ...100% g success • (Ã • ù n 2 â \$ | •
, - R € Ÿ p é Š FLASH g] g Ã Ü 6 é ß Š ¾ • - dg . T á 6
reload n g nd;j ' p 4 0 6 3 ož



20• Ý 6 show version detail '54 g Ó •⁻ f — È

3507.25

FTP



```

1      FTP Server  i      USB0      S6010  J FLASH
      i
      α
Ruijie(config)#ftp-server username admin
Ruijie(config)#ftp-server password ruijie
Ruijie(config)#ftp-server topdir usb0:/      ---      U
Ruijie(config)#ftp-server timeout 300
Ruijie(config)#ftp-server enable
  
```

```

2      PC      FTP Client      FLASHFTP      FTP      PC
S57H      J
  
```

```

3      PC      FTP      6      FTP Server
  
```


```

4      Upgrade      USB
  
```

```

5      — u
      FTP      USB      FTP      FTP
      6      USB      U
      Upgrade
  
```

TFTP

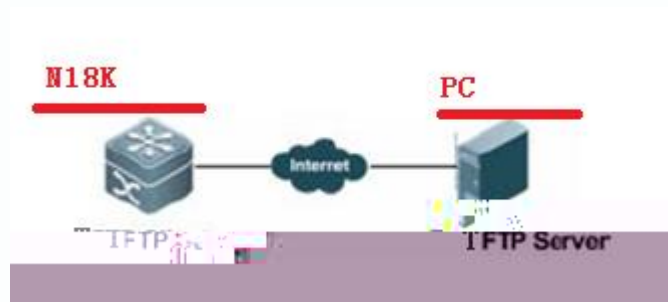

- 1 PC TFTP Server PC S57H ↙
- 2 S57H TFTP Client TFTP , USB
 ↳ tmp
 Ruijie#copy tftp://192.168.1.1/S5700H_RGOS11.4(1)B2_02191904_install.bin
 usb0:/S5700H_RGOS11.4(1)B2_02191904_install.bin
- 3 Upgrade USB

- 5 —u
 TFTP USB TFTP 0 TFTP U
 6
 USB Upgrade

TFTP

FTP FTP TCP

TFTP

UDP

TFTP

G m

5

-

www.ruijie.com.cn

-

www.ruijie.com.cn/service.aspx

-

↘

support.ruijie.com.cn

-

webchat.ruijie.com.cn

-

4008-111-000